


LENGTH

For determining the length, using a steel tape measure, measure along the back of the pew seat from inside end to inside end.


If the pew has a center divider, measure each section separately from the pew end to the divider.

Record the length to the nearest one eighth inch.

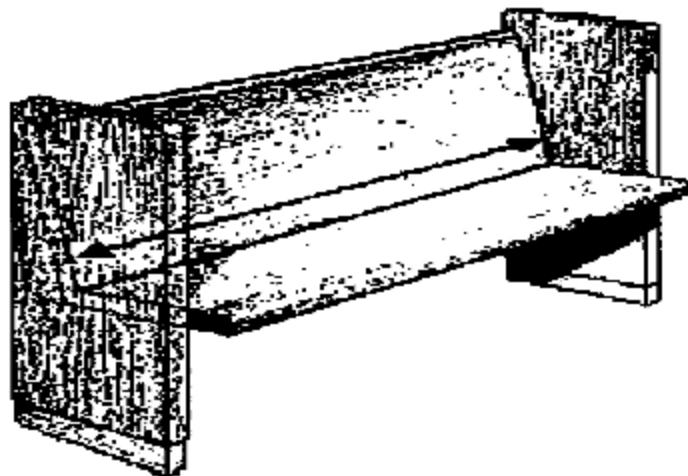

HEIGHT

Measure from corner of the seat to the start of the top rail. A groove will usually indicate where the top rail starts.

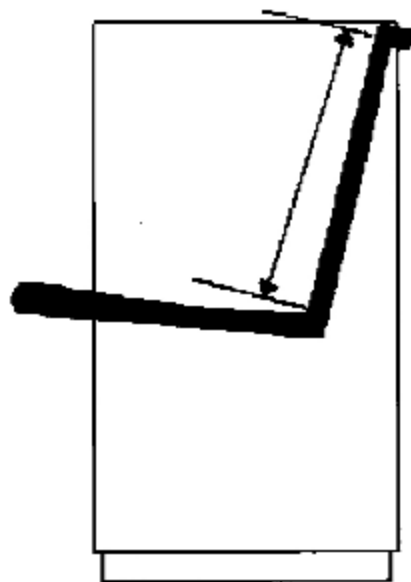

- Pew Back Cushions will be pinned in place or fastened with Velcro.
- $\frac{3}{4}$ " thick high density foam padding mounted to $\frac{1}{4}$ " plywood base is standard for Pew Back Cushions.
- A Weltded top edge is an optional and is highly recommended for a finished look.